



Фабрика меблів

КИЇВСЬКИЙ СТАНДАРТ





ОФІСНИЙ
СТІЛ (№3)









Фабрика меблів

КИЇВСЬКИЙ СТАНДАРТ

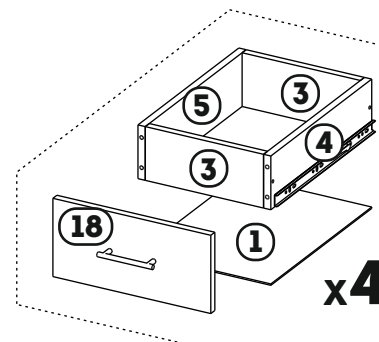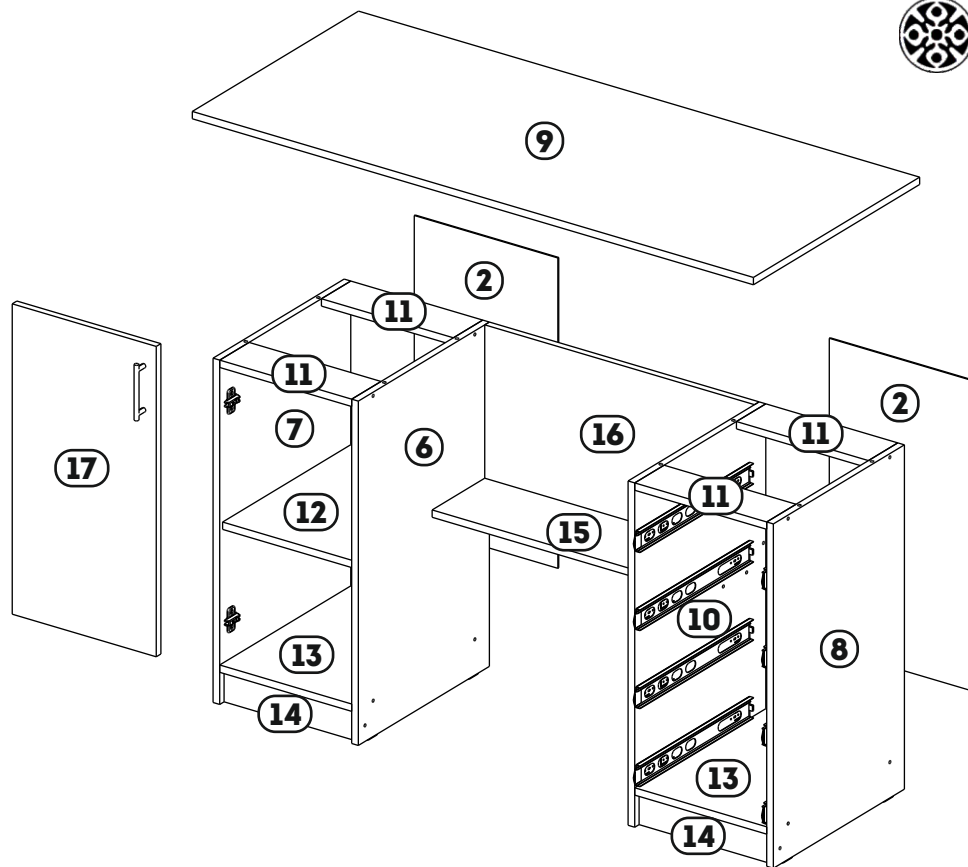





№	a*b	X
1	292x400	4
2	676x346	2
3	260x114	8
4	400x114	4
5	400x114	4
6	750x451	1
7	750x451	1
8	750x451	1
9	1352x572	1
10	750x451	1
11	318x101	4
12	318x441	1
13	318x451	2
14	318x70	2
15	650x181	1
16	351x650	1
17	676x347	1
18	166x347	4

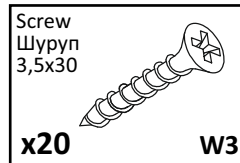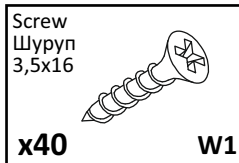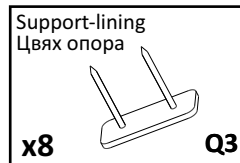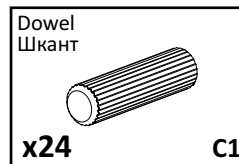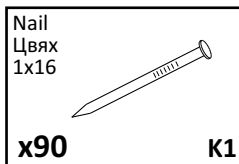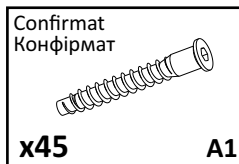



Фабрика меблів

КИЇВСЬКИЙ СТАНДАРТ

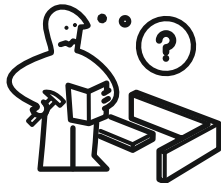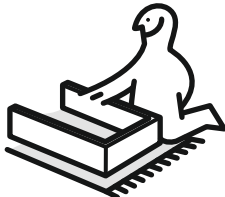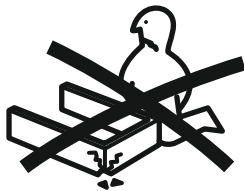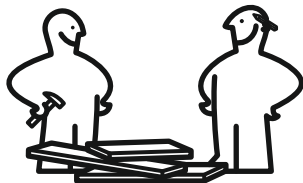

kievstandart.com

ЗАГАЛЬНІ ТЕХНІЧНІ ВКАЗІВКИ ПО ЗБИРАННЮ МЕБЛІВ

- ПЕРЕД ЗБИРАННЯМ ПЕРЕВІРТЕ КОМПЛЕКТНІСТЬ ДЕТАЛЕЙ ТА ФУРНІТУРИ.
- ДЛЯ ЗБИРАННЯ МЕБЛІВ РЕКОМЕНДУЄМО СКОРИСТАТИСЬ ПОСЛУГАМИ КВАЛІФІКОВАНИХ СПЕЦІАЛІСТІВ.
- ДЛЯ ЗАПОБІГАННЯ ПОДРЯПИН ВИКОНУЙТЕ ЗБИРАННЯ НА ПОВЕРХНІ, ЯКА НАКРИТА ТКАНИНОЮ АБО КАРТОНОМ.

ПРАВИЛА ДОГЛЯДУ ТА ЕКСПЛУАТАЦІЇ

- БЕРЕЖІТЬ МЕБЛІ ВІД ДОВГОГО КОНТАКТУ З ВОДОЮ ЧИ З ГАРЯЧОЮ ПАРОЮ.
- ЗАБЕЗПЕЧТЕ ДОСТАТНЮ ВІДСТАНЬ ВІД ЕЛЕКТРИЧНИХ ПРИЛАДІВ ТА ОБІГРІВАЧІВ.
- У РАЗІ ПОЯВИ БРУДУ НА МЕБЛЯХ ВИДАЛЯЙТЕ ЙОГО ВОЛОГОЮ ТКАНИНОЮ ІЗ НАСТУПНИМ ВИТИРАННЯМ НАСУХО. НЕ ВИКОРИСТОВУЙТЕ АБРАЗИВНІ МАТЕРІАЛИ.

GENERAL TECHNICAL INSTRUCTIONS FOR FURNITURE ASSEMBLY

- CHECK COMPATIBILITY OF PARTS AND ACCESSORIES BEFORE ASSEMBLY.
- FOR FURNITURE ASSEMBLY, WE RECOMMEND USING THE SERVICES OF QUALIFIED SPECIALISTS.
- DO ASSEMBLY ON A SURFACE COVERED WITH CLOTH OR CARDBOARD TO PREVENT SCRATCHES.

CARE AND MAINTENANCE OF FURNITURE

- KEEP THE FURNITURE FROM PROLONGED CONTACT WITH WATER OR HOT STEAM.
- ENSURE SUFFICIENT DISTANCE FROM ELECTRICAL APPLIANCES AND HEATERS.
- IF THERE IS DIRTY ON THE FURNITURE, REMOVE IT WITH A DAMP CLOTH AND THEN WIPE IT DRY. DO NOT USE ABRASIVE MATERIALS.

1

Telescopic Guide
Направляющая
Телескоп.
400 мм


x4



NT 1

Screw
Шуруп
3,5x16


x20






W1

Mounting Plate
Монтажна Платка

x2



P6

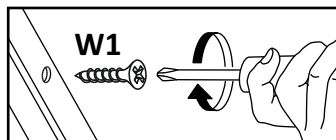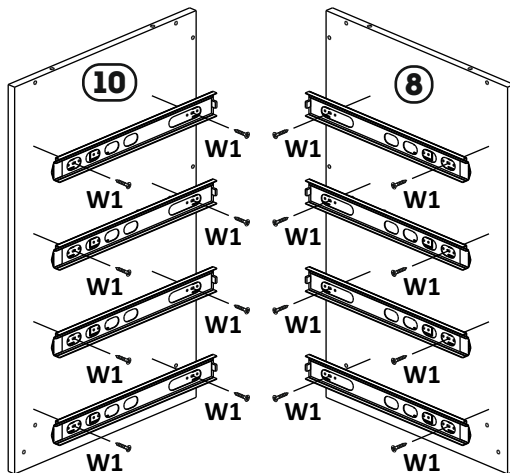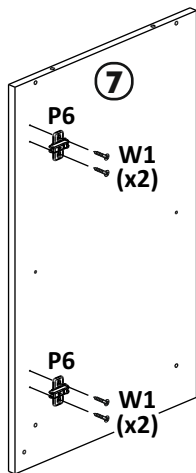

2

Confirmat
Конфірмат

x10






A1

Cap for confirmate
Заглушки для конфірмамата

x10



A2

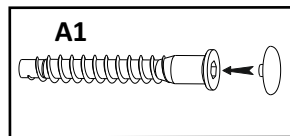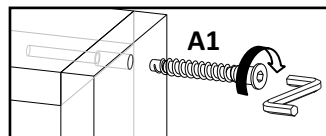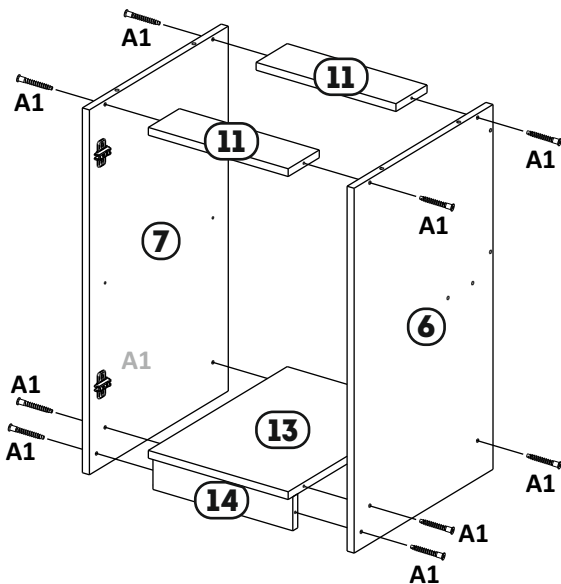

3

Conformat
Конфірмат

x10

A1



Cap for conformat
Заглушки для конфірмата

x10

A2




4

Conformat
Конфірмат

x9




A1



Cap for conformat
Заглушки для конфірмата


x9

A2

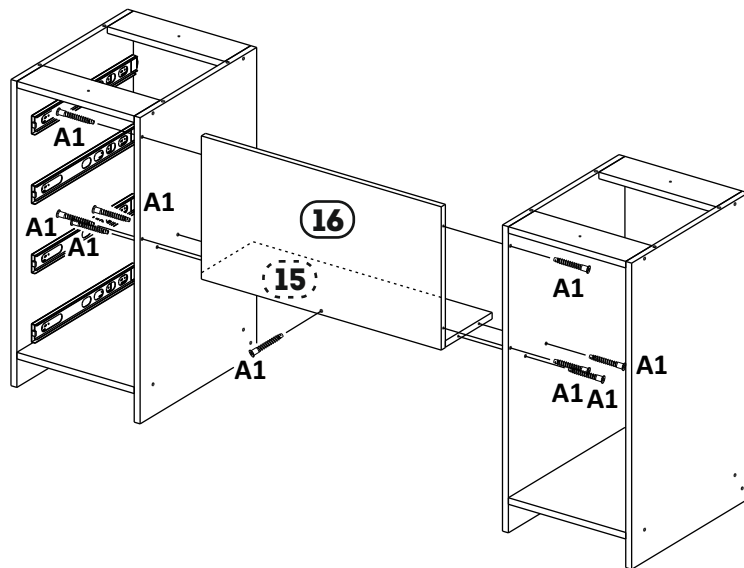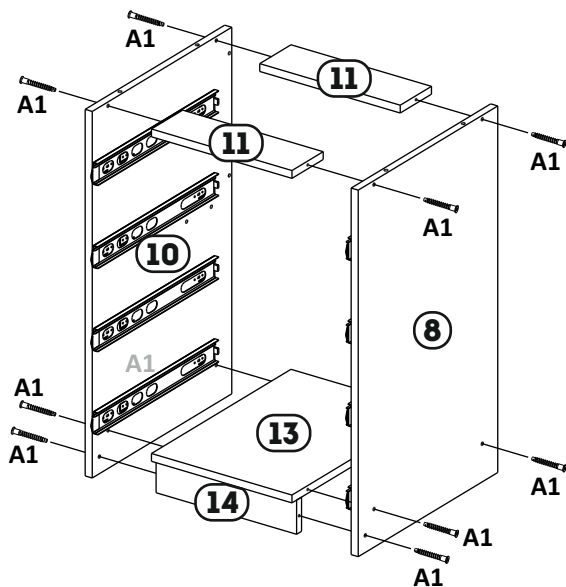

5


Nail
Цвях
1x16



x40


K1

Support-lining
Цвях опора




x4

Q3

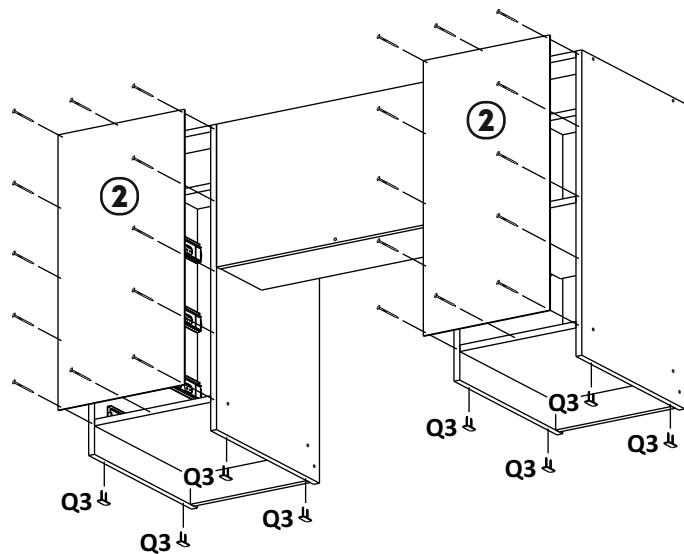

6


Dowel
Шкант



x8


C1

Screw
Шуруп
3,5x30



x4

W3

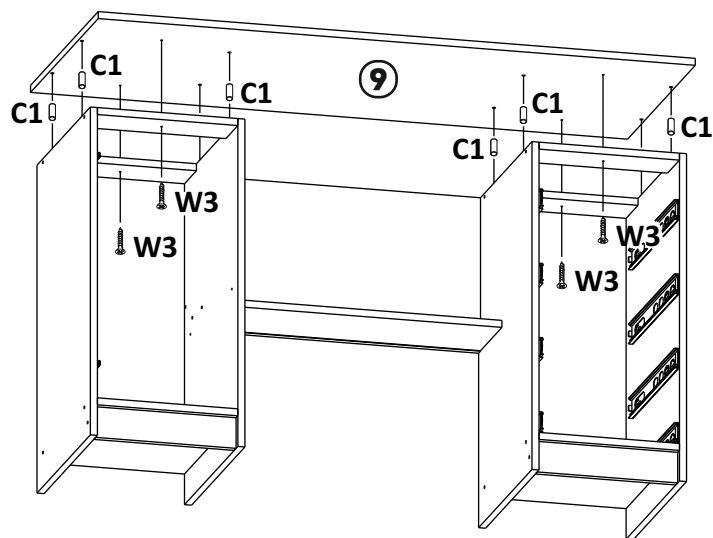


7

Confirmat
Конфірмат

x4




A1



Railing Handle
Ручка Рейлінг

x1

RR 1

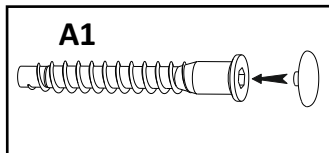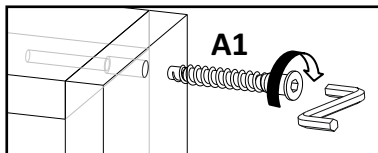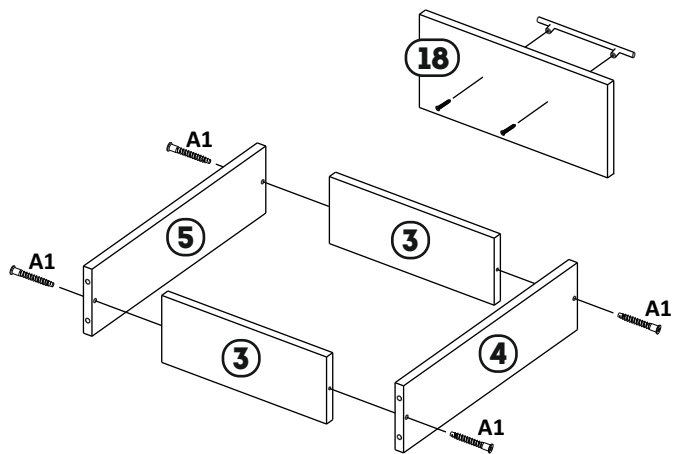


8

Dowel
Шкант

x4




C1



Nail
Цвях
1x16


x12

K1

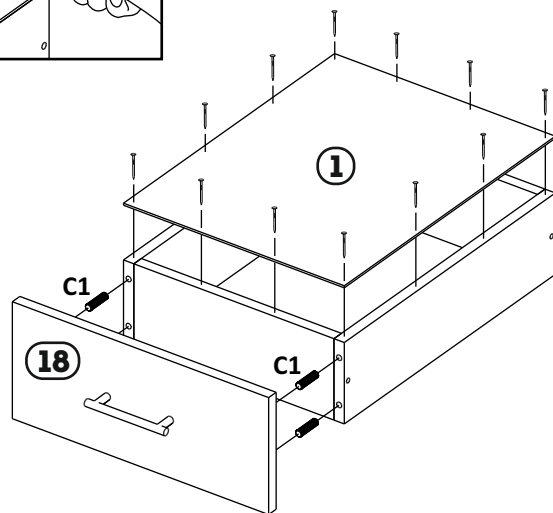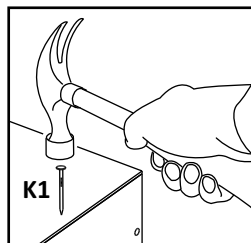

9

Screw
Шуруп
3,5x16



x4

W1


Telescopic Guide
Направляющая
Телескоп.
400 мм



x1



NT 2

Screw
Шуруп
3,5x30




x4

W3

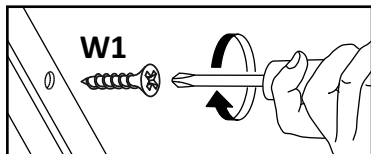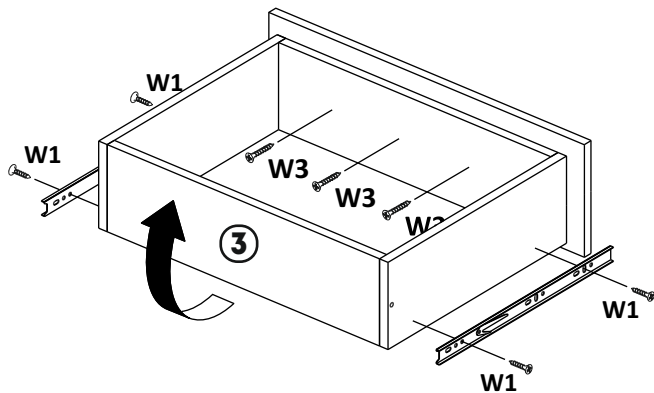

10


Screw
Шуруп
3,5x16



x4

W1

Full Overlay Hinge
Петля накладна



x2

P5

