

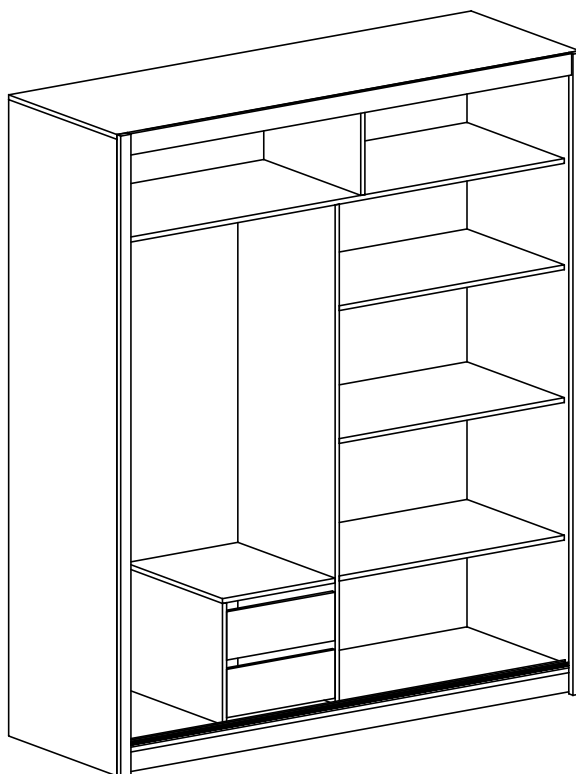



TORONTO

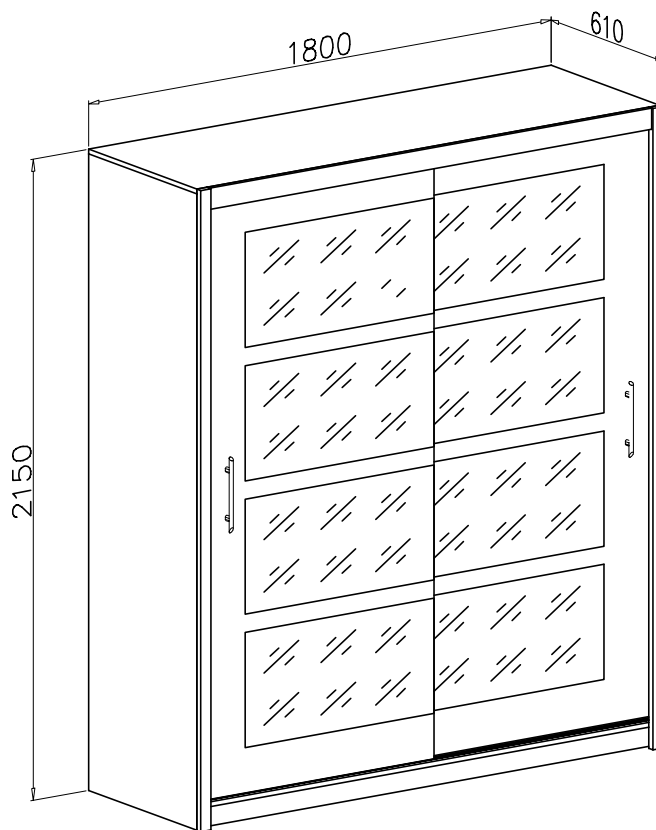

BITTE MONTAGEANLEITUNG BEACHTEN


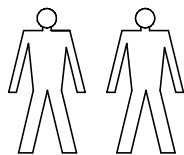


Zur Montage benötigte Werkzeuge (nicht vom Hersteller mitgeliefert)

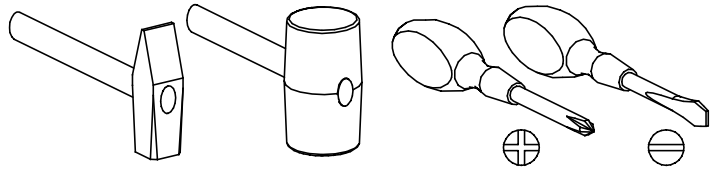


Kleiderschrank

TORONTO

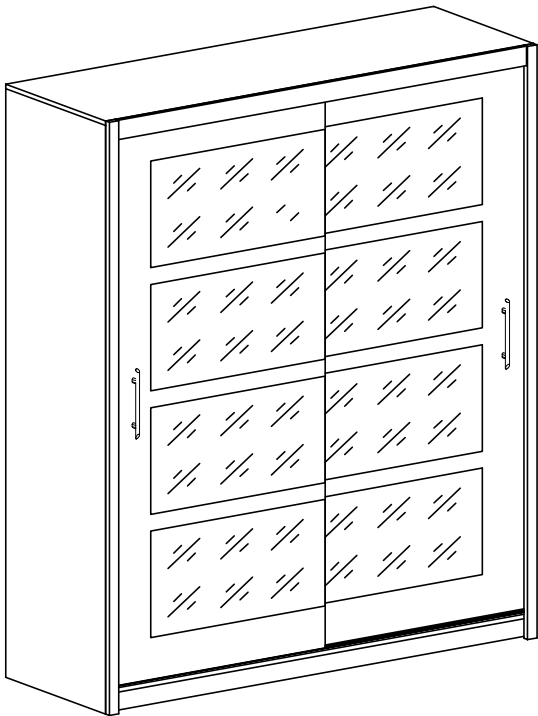


L - 16 St.
6 x 13 mm

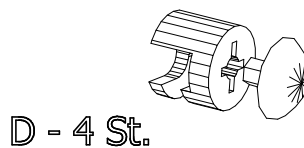


D - 4 St.




O - 12 St.




C - 4 St.




I - 8 St.
EURO 6 x 11

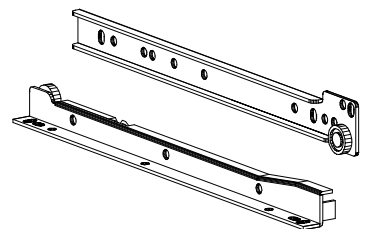

S - 2 Kpl.




W - 20 St.




U - 12 St.




T - 1 St.




P - 2 St.




H - 1 St.



E - 2 St.




J - 4 St.
4 x 30 mm




N - 4 St.




G - 16 St.
4 x 13 mm




F - 90 St.

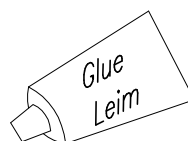


Y - 1 St.

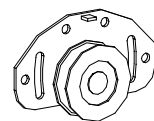

K - 4 St.




A - 30 St.
7 x 50 mm



B - 69 St.




M - 8 St.
3,5 x 13




Z - 1 St.


1

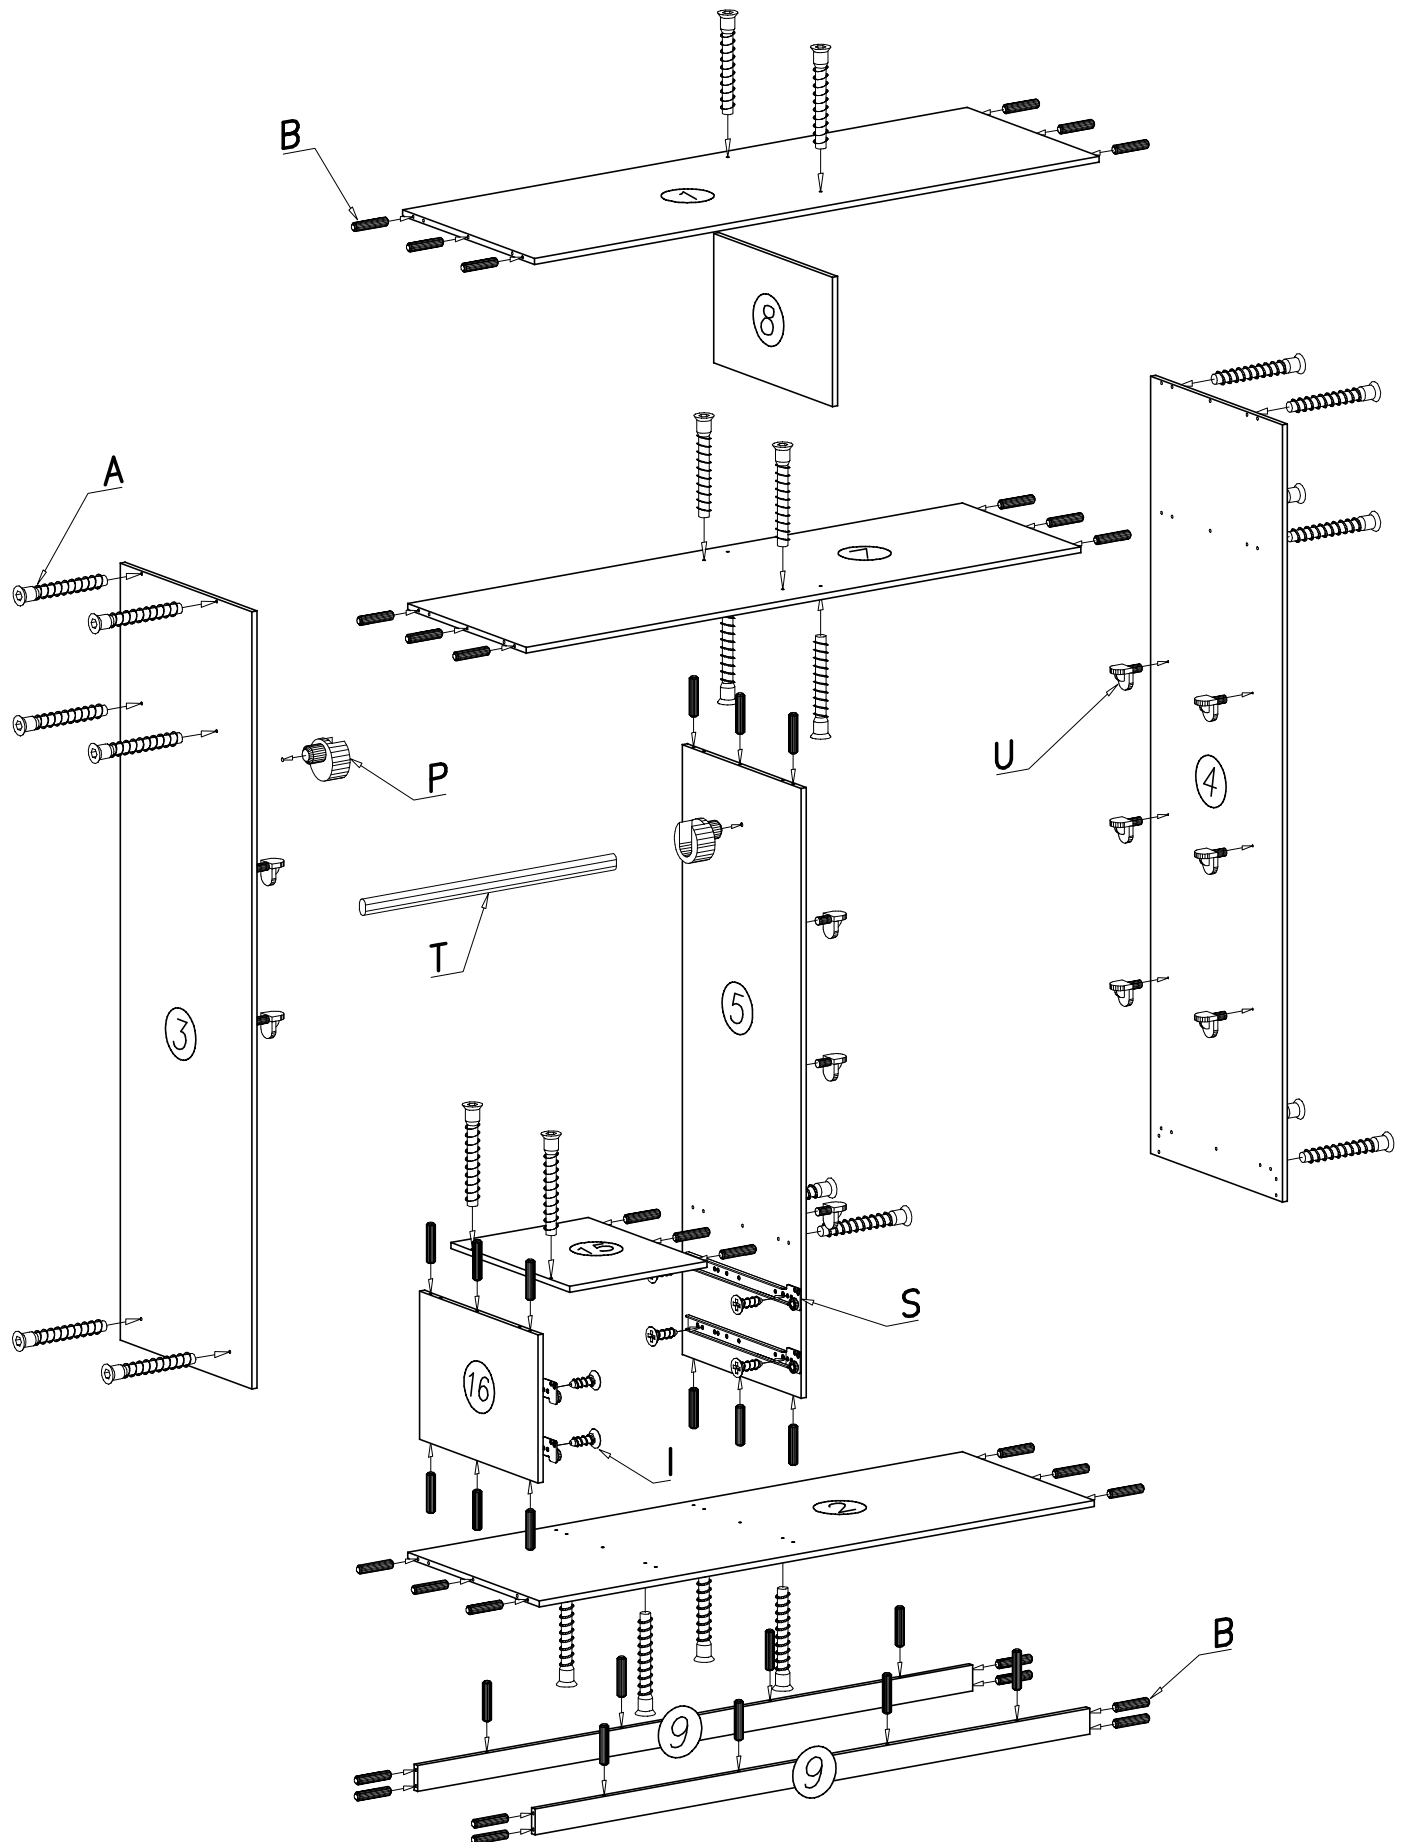




2

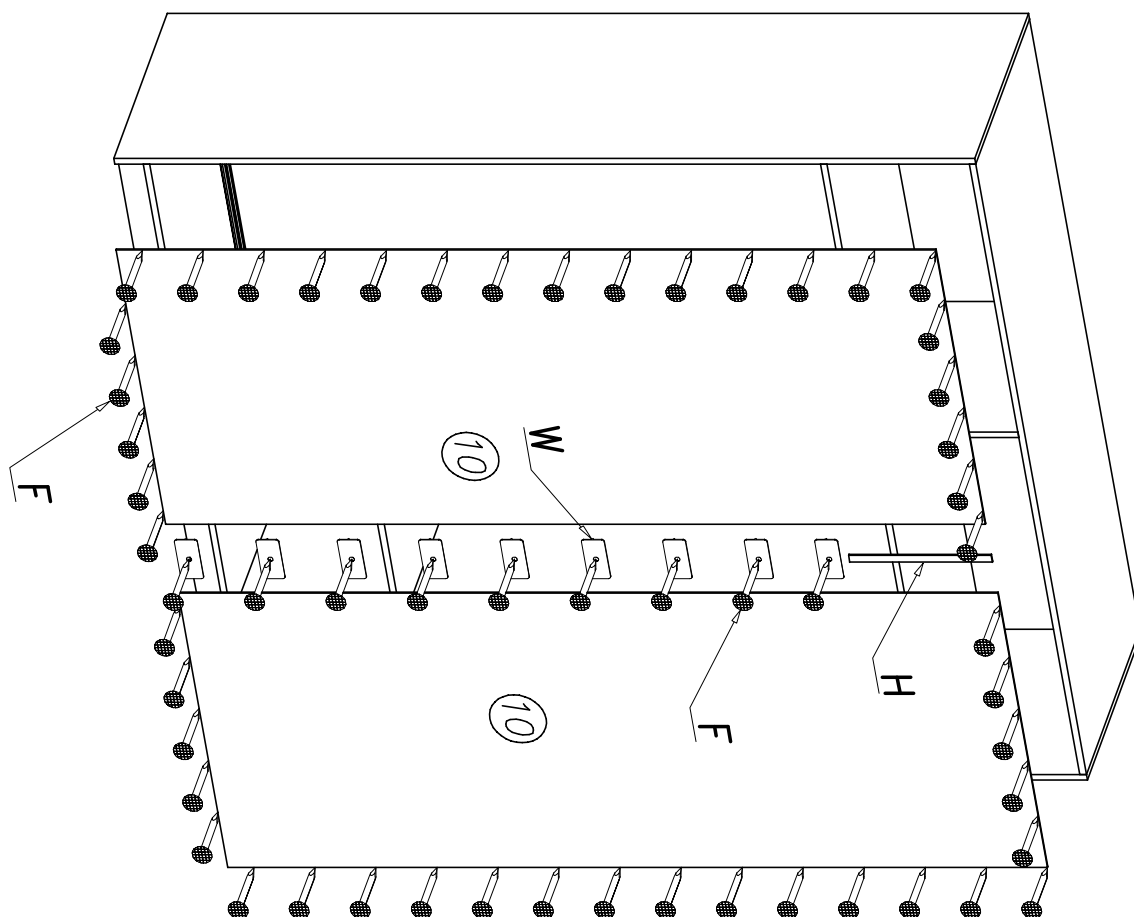


3

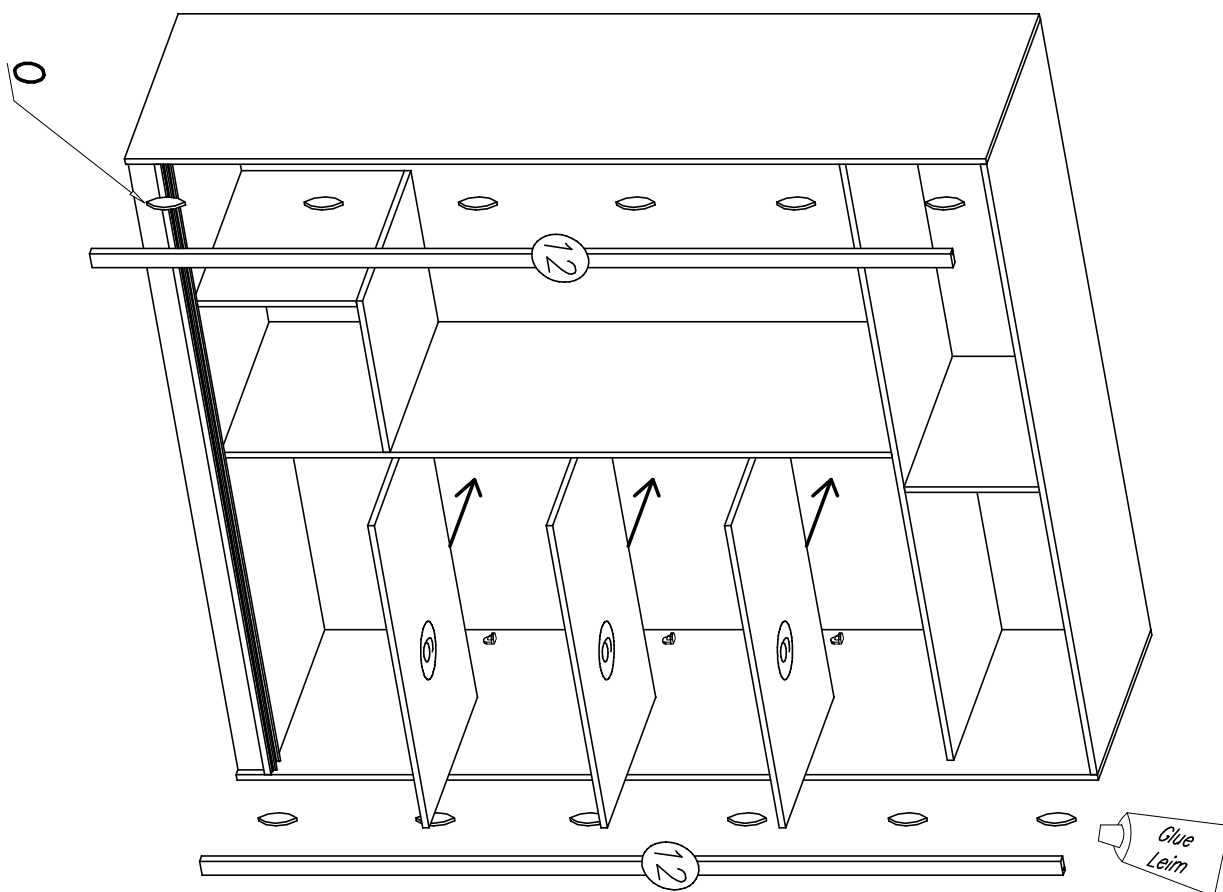

4

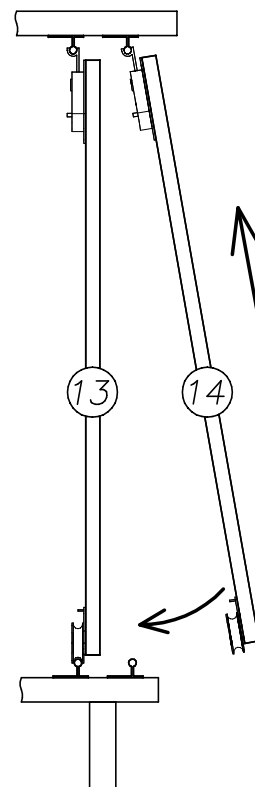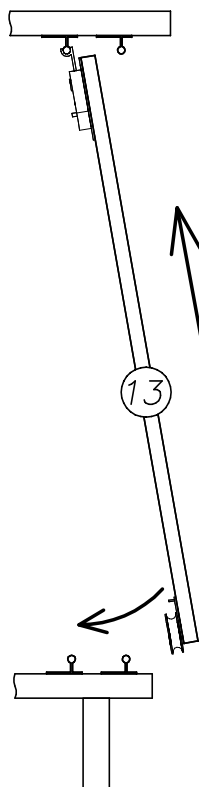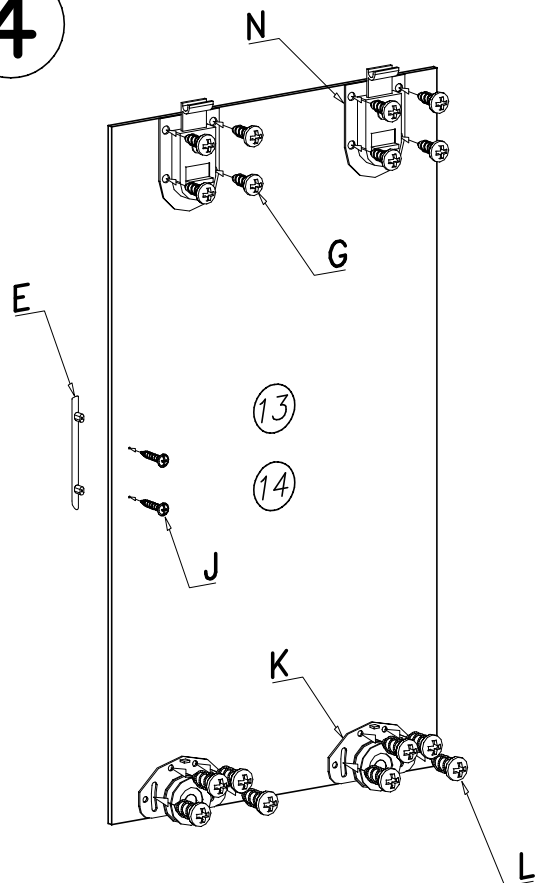

5

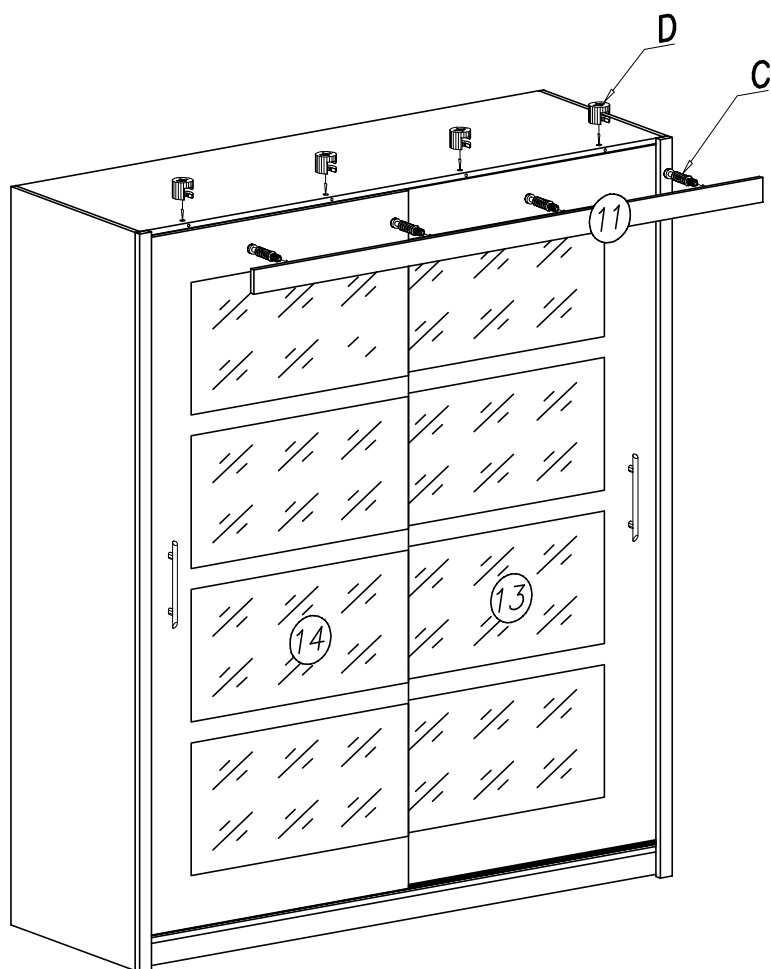

6

